

# **3 METAL / 3 RUBI STAR**

RANGE OF SLIDERS / GAMA DE CURSORES  
GAMME DE CURSEURS / GAMMA CURSORIMETALLICHE



01 A



05 A / 20 L



12 S (Only 3 Metal)



46 SP (Only 3 Metal)



48 L



06 A / 26 L



08 A / 28 L



09 A



10 A / 51 L



18 A / U9 L



21 L



29 A / 27 L



31 L



32 L



36 A / 56 L



40 A / 52 L



42 A / 24 L



44 A



47 A




60 R



80 L



85 A / 84 L

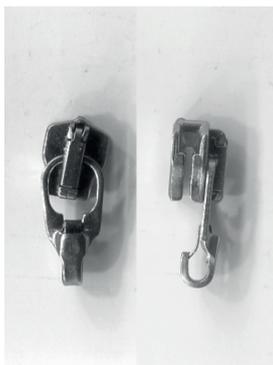

AP A / 4V L



OK A / AD L



AK A



BN A



BE A



BV A



DO A / DLL



L  
EA (TRANSPARENT)



EA (NEGRO / BLACK)



EX A / WM L



IS A / Q7 L



JR A / NX L



KLA / OJ



KQA / JXL



LHA / O2 L



LA A



L9 A



LE A



MP A / ML L



NI A



OP A / K5 L / A0 A (Reverse)



OQ A



OK A (Only Rubi Star)



PO A / PM L



PP A



PW A



PN A



PE A / PB L / P1 A (Reverse)



QA



Q0 A



RH A / E0 A (Reverse)



RW A



RI A / ET L



RP A / Z3 L



RZ A (Only 3 Metal)



S1 A / 1H L



SK A



SX A / T7 L



SA A / 87 L



S3 A



SB A / SL L



TD A



TP A / K9 L



TFA A / N7 L




TN A



TE A / SJ L



TK A / K6 L

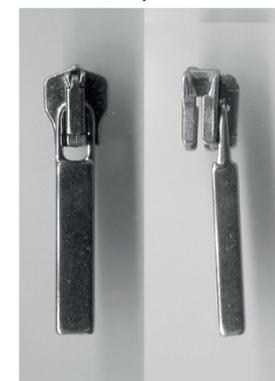


TG A



TTA A / K8 L




TY A

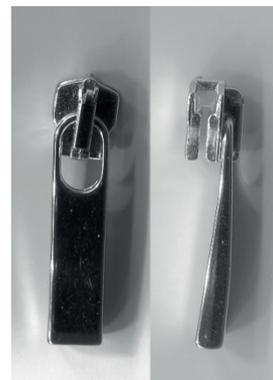

U2 A



U7 A / UC L

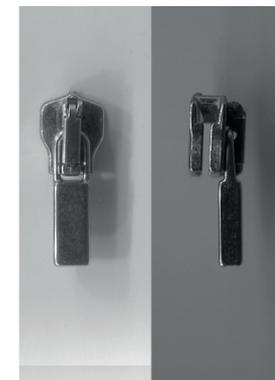

UI A / 3J L



W5 A / 3H L




WAA



XGA



XBA

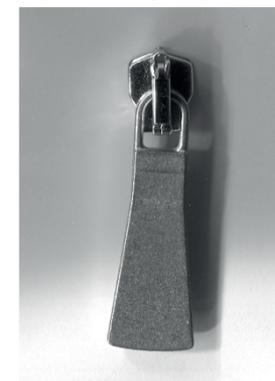

XMA



ZT A



3M L



3K A / 3L L



3X A / 4Y L



2Z A



5M A



8P



9Z



6Y



9K



9X



9M



2F



9J